
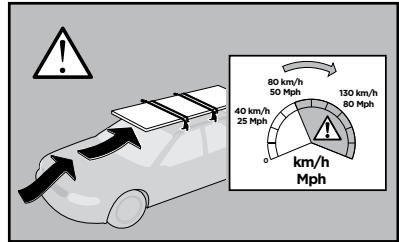
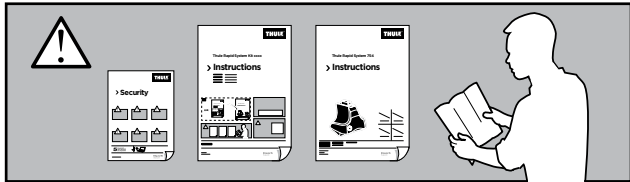
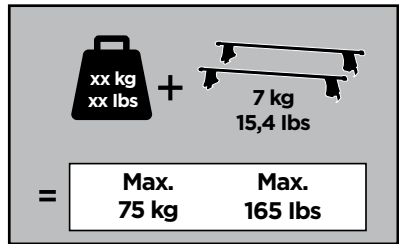


# Thule Rapid System Kit 1195

# > Instructions

**AUDI A2, 5-dr MPV, 00-05\***

\*Without sunroof



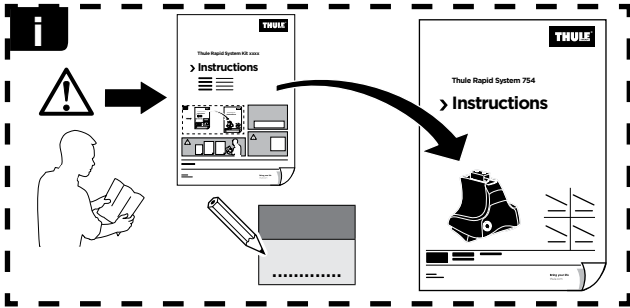


ISO 11154-E

**141195**



C.20121015  
519-1195-01

**Bring your life**  
thule.com

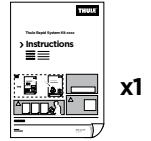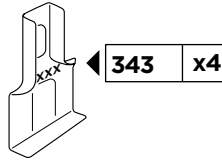

1



	X (scale)	X (mm)	X (inch)
<b>AUDI A2, 5-dr MPV, 00-05</b>	<b>31,5</b>	<b>966</b>	<b>38</b>

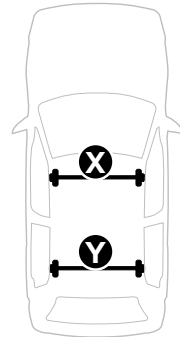
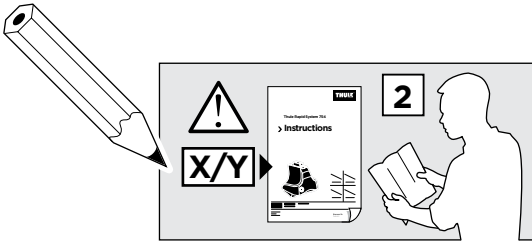


	Y (scale)	Y (mm)	Y (inch)
<b>AUDI A2, 5-dr MPV, 00-05</b>	<b>26</b>	<b>911</b>	<b>35 7/8</b>

**2**

**AUDI A2, 5-dr MPV, 00-05**

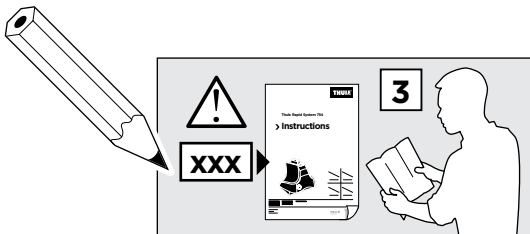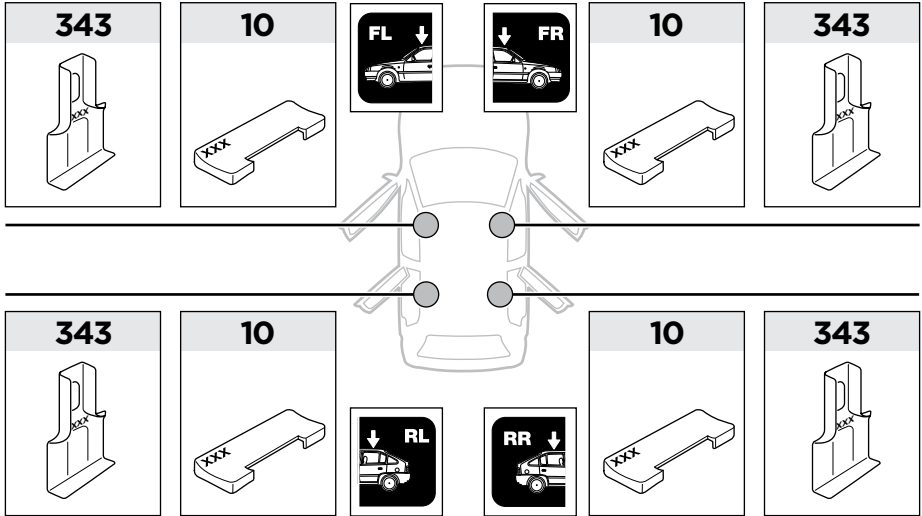

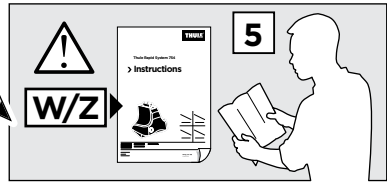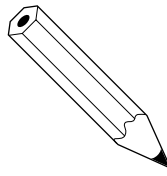**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>AUDI A2, 5-dr MPV, 00-05</b>	<b>230</b>	<b>700</b>	<b>9</b>	<b>27 1/2</b>

