

# Thule Rapid System Kit 1048





# > Instructions

**SAAB 9-5**, 4-dr Sedan, 98-04, 05-09 / \*99-09

**SAAB 9-5**, 5-dr Estate, 98-10

**SAAB 9-5**, 5-dr Wagon, \*05-08


\*North America

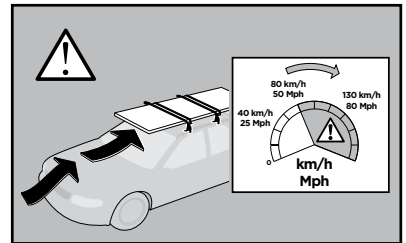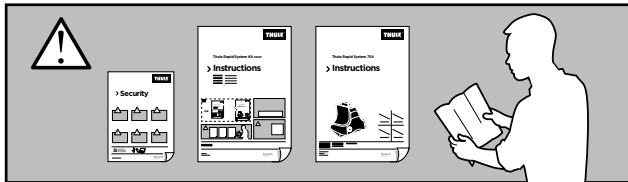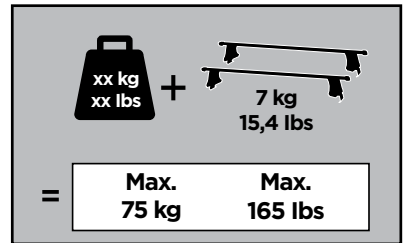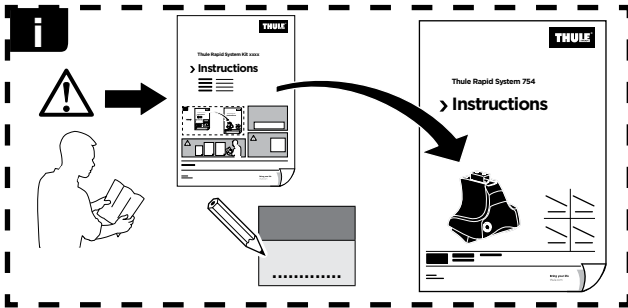

ISO 11154-E




16 x4



102 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>SAAB 9-5</b> , 4-dr Sedan, 98-04, 05-09 / *99-09	34	991	39
<b>SAAB 9-5</b> , 5-dr Estate, 98-10	34	991	39
<b>SAAB 9-5</b> , 5-dr Wagon, *05-08	34	991	39

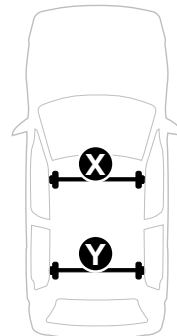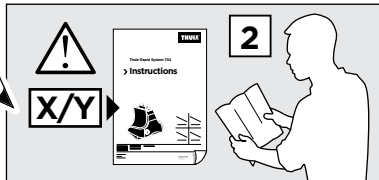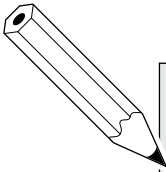



	Y (scale)	Y (mm)	Y (inch)
<b>SAAB 9-5</b> , 4-dr Sedan, 98-04, 05-09 / *99-09	31,5	966	38
<b>SAAB 9-5</b> , 5-dr Estate, 98-10	31,5	966	38
<b>SAAB 9-5</b> , 5-dr Wagon, *05-08	31,5	966	38

**2**

**SAAB 9-5**, 4-dr Sedan, 98-04, 05-09 / \*99-09

**SAAB 9-5**, 5-dr Estate, 98-10

**SAAB 9-5**, 5-dr Wagon, \*05-08

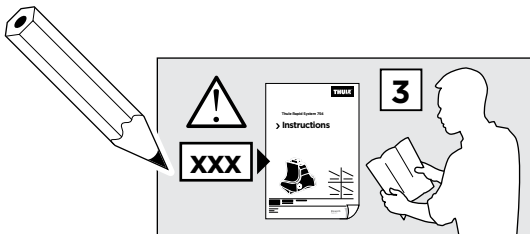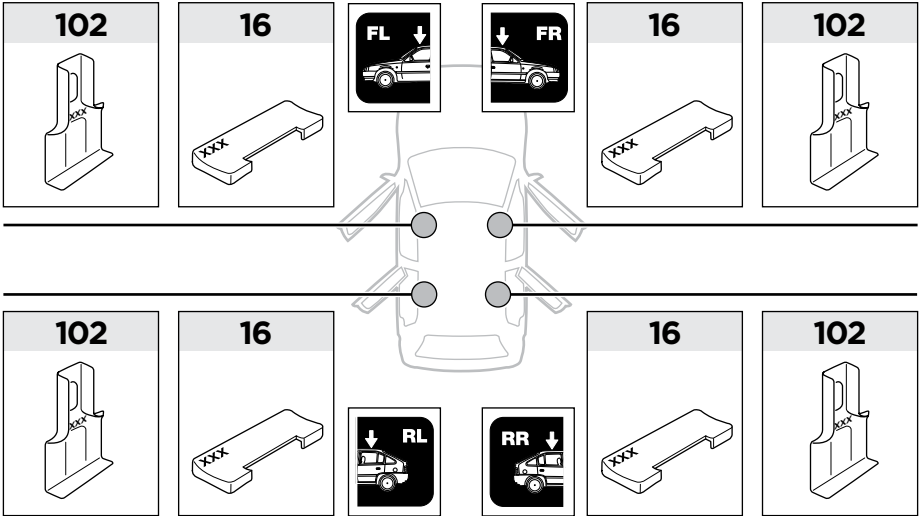

3

