
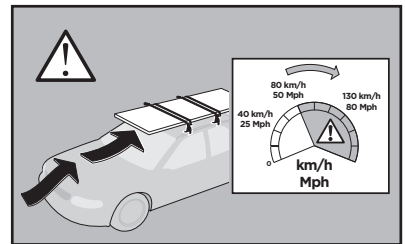
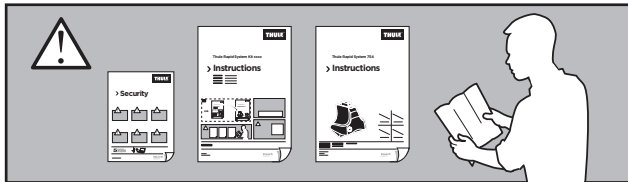
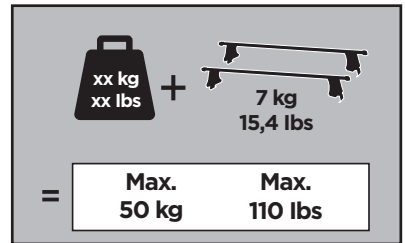



Thule Rapid System Kit 1099

> Instructions

FIAT Panda, 5-dr Hatchback, 03-


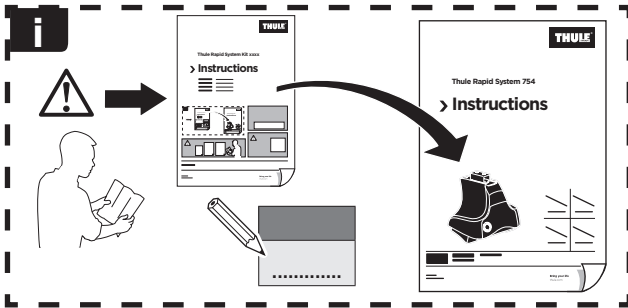


ISO 11154-E

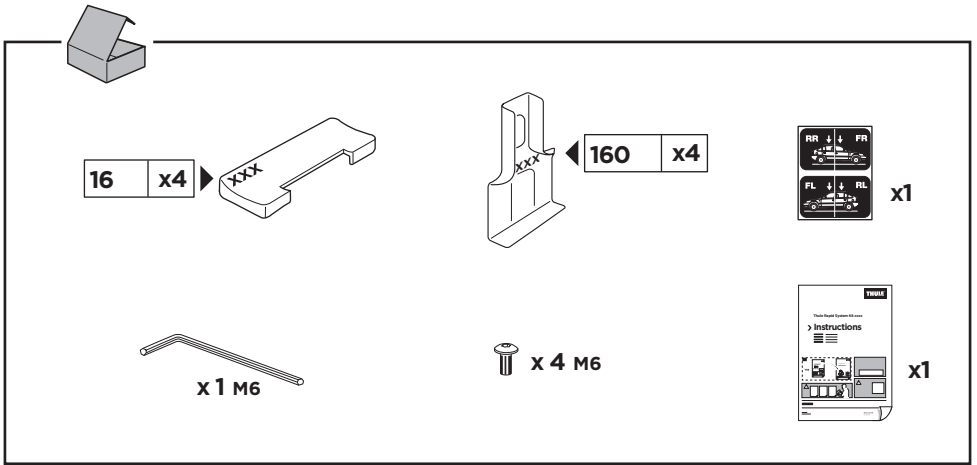

1



	X (scale)	X (mm)	X (inch)
FIAT Panda, 5-dr Hatchback, 03-	29	941	37

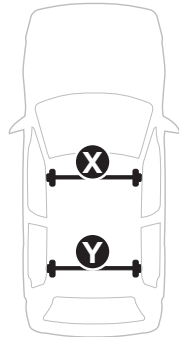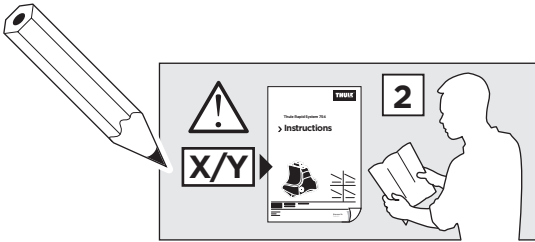


	Y (scale)	Y (mm)	Y (inch)
FIAT Panda, 5-dr Hatchback, 03-	26	911	35 ⁷ / ₈

2

FIAT Panda, 5-dr Hatchback, 03-

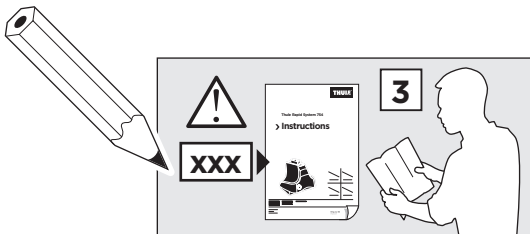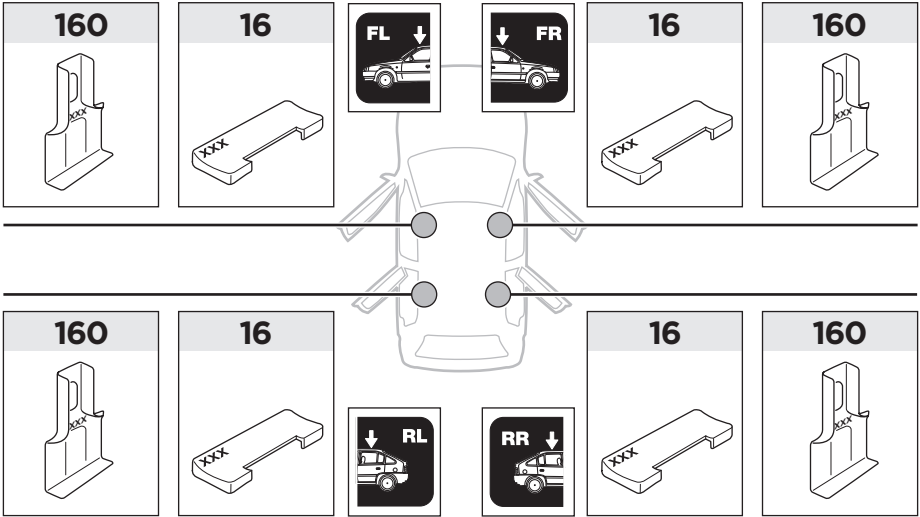

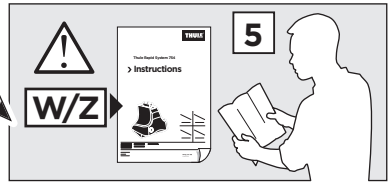3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Panda, 5-dr Hatchback, 03-	750	1015	29 1/2	40

